



**Dual Cash
Drawer Splitter**



Epson Printer



Star Printer



Citizen Printer



Part# POS108

POS108 is both a Cash Drawer Alarm and a Print Receipt Alarm all in one. Helps to Prevents Till Tapping and Theft. Easy to install. No tools or software changes needed. Plug and Play.

Typical Application:

- Retail Stores
- Restaurants
- Bars
- Clubs
- Hotels

Unlike any other cash drawer alarm on the market today, The POS108 is the only device that can be used as a Cash Drawer Alarm & Splitter to support two Cash Drawers from one POS printer or the POS108 can be configured by the use of DIP Switches to be a Printer Alarm, sounding a buzzer at the end of a print receipt. A Alarm shut off PUSH BUTTON is built in the POS108 that can be configured as a Alarm Shutoff button. Alarm delay timers are set using the DIP Switches offering you various Alarm trigger time delay options for your personal requirements.

Features & Benefits

- Helps Prevent Till -tapping and Theft
- Alarm and LED flashing when Cash Drawer is Left Open or when Receipt is Printed
- Splits one RJ12 Receipt Printer Cash Drawer Kick-out to Two RJ12 Cash Drawer ports
- No External Power Supply Needed
- No Special Software and No software setting changes needed. Plug & Play
- Functions with all EPSON, Star, Citizen, IBM and other compatible Receipt Printers
- Easy to Install, no tools needed, Velcro strip provided for easy mounting
- Supports two N/O or one N/C Switch Cash drawer(s)
- Faster Drawer Pulse Monitoring 50 mSec.
- Optional Paper Sensor module available for Paper Receipt Alarm (POS-PSen)
- **One Year Warranty**

Specification:



**Optional Paper
Receipt Sensor**



**POS108 &
POS-PSen on a
printer**



**Alarm will
sound when
printed**

POS 108	
Selectable modes using Dip Switches	Cash Drawer Alarm (Until Drawer is closed) Cash Drawer Alarm (Until Drawer is closed or 1 Min. On) Paper Sensor Alarm (Until Receipt is Removed) Paper Sensor Alarm (Until Receipt is Removed or 1 Min. On) Printer Receipt Alarm (1-10 seconds On Selectable) Printer Receipt Alarm (On until Push Button to Shut-off)
Power	Power from RJ12 cash drawer port on receipt printer
Current	10 - 100 mA typical current used by device only (POS 108 & POS-PSen 130 – 200 mA)
Drawer Connectors	2 x RJ12 , Drawer 1 & Drawer 2 Normally Open N/O or 1 Normally Closed N/C cash Drawer(s) 50 mSec Min Pulse width for Printer Alarm Trigger.
Dimensions	POS 108 80 x 45 x 28.5 mm (WxDxH) 110 gm, POS-PSen (35x59x16 mm) 25 gm
RJ12 Cable Length	POS 108: 180 cm (6 Feet) POS-Psen: 30 cm (1 foot)
Humidity / Temp.	10% - 90% relative humidity , -20C to 55C
Printers Supported	Star/ Epson/ Citizen/ IBM and compatible printers with RJ12 drawer port
Piezo Electric Buzzer	4.5 kHz @ 90 dBA at 30 cm
Drawer Triggers	The Drawers are triggered by the Cash Drawer pulse from the RJ12of Receipt Printer Cash Drawer port
Drawer Alarm	Alarm will sound if either drawers are left open manually or by the printer trigger. Cash Drawer must have an RJ12 cable with a drawer normally open switch for the Drawer Alarm to function
Printer Alarm	The printer alarm is triggered by the Cash Drawer pulse from the RJ12 of Receipt Printer Cash Drawer port. NO Drawer needed
Operating System	Not dependent on any operating system or software
Warranty	1 year

Dimension View:

